Electronic Check Service EQUIPMENT CHECKLIST

PLEASE VERIFY THAT THE FOLLOWING ITEMS ARE INCLUDED IN THIS PACKAGE.

INVENTORY (10 ITEMS):

- Omni 3730LE / Vx510LE Terminal
- Terminal Power Supply
- Phone Cord (white)
- Phone Cord (gray)
- Phone Cord Splitter (beige)
- RDM Imager Interface Cable (gray)
- RDM Imager
- RDM Power Supply
- Thermal Paper

Electronic Check Service

EQUIPMENT SETUP GUIDE



Omni 3730le/Vx510le and the RDM EC6000i Imager



AT ELECTRONIC MERCHANT SYSTEMS INC.

1-800-476-5020 • www.elect-mer.com



Electronic Check Service

EQUIPMENT SETUP

TO SETUP YOUR EQUIPMENT, FOLLOW THESE STEPS:

- 1. Please refer to the Equipment Checklist on the back page to verify that the items listed are included in this package.
- 2. Connect the RDM Power Supply **1** port to an external power source using the RDM Power Supply cable.
- 3. Connect the Terminal's RS232 port **B** to the RDM Imager port **2** using the gray RDM Imager Interface Cable.
- 4. Connect the Phone Cord Splitter to the RDM Imager phone port 3.
- 5. Connect the Terminal's phone port A to the Phone Cord Splitter port 4 using the white Phone Cord.
- 6. Connect the gray Phone Cord to the Phone Cord Splitter port and to an analog phone wall jack.
- 7. If processing online debit using an external PIN pad, connect it to the terminal's PIN pad port C.


Note: Always connect the external PIN pad to the Terminal's PIN pad port BEFORE connecting the Terminal to an external power source.

8. Connect the Terminal's Power Supply **D** to an external power source using the Terminal's Power Supply Cable.

Omni™ 3730LE / Vx570LE and the RDM EC6000i Imager

IMPORTANT:

- Power up your RDM Imager until a steady orange light indicates ready mode. Then, power up the point-of-sale terminal.
- We recommend that the RDM Imager be placed to the left of the point-ofsale terminal.
- Place terminal equipment at least 12" away from magnetic fields, such as cash registers, computer CRT displays, electric outlets or other magnetized equipment.
- Equipment setup requires using a direct analog phone line.

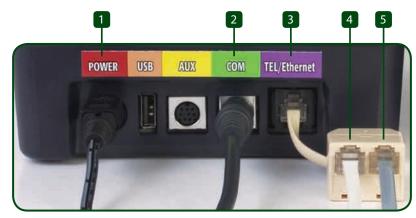

RDM Imager Rear Panel

